

RRD

# AIRWINDSURF

## RIGGING INSTRUCTIONS

robertoriccidesigns

### 4 - UNROLL AND UNFOLD THE SAIL SO IT IS LYING FLAT.

\*Make sure the wind comes from behind



### 5 - FIT BATTEN JOIN.



### 6 - TENSION BATTENS.



### 9 - FIT BOOM FRONT END AND ATTACH UPHAUL TO BASE.



### 10 - SET BOOM LENGTH. APPLY OUTHAUL. TIE OFF EXCESS ROPE.



### DERIGGING

#### 1 - RELEASE OUTHAUL AND TAKE OFF BOOM.



#### 2 - RELEASE DOWNHAUL AND PUSH OUT MAST.



#### 3 - DETENSION AND SEPARATE THE BATTENS AT LEAST 4CM.



### 1 - CHECK YOU HAVE ALL PARTS.

- Sail
- Mast - 5 pieces
- Boom - 2 pieces
- Base



### 2 - CONNECT MAST.

\*Mast sections are numbered and must be connected correctly.



### 3 - CONNECT BOOM.



### 7 - THREAD MAST.

\*Check all the ferrels are together by running a finger along the mast sleeve



### 8 - INSERT MAST FOOT. THREAD ROPE. PULL DOWNHAUL. TIE OFF EXCESS ROPE.



### 11 - TENSION BATTENS TO REMOVE WRINKLES.




### SAIL IS READY TO HIT THE WATER.



#### 4 - ROTATE THE SAIL SO MAST SLEEVE IS DOWNWIND. FOLD ALONG CENTRE.



#### 5 - FOLD THE SAIL AT THE MIDDLE BATTEN.

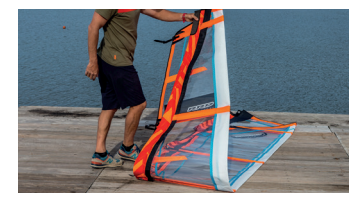

#### 6 - ROLL THE SAIL.



#### 7 - FIT BOOM INTO BAG FIRST, FOLLOWED BY SAIL, MAST AND MAST BASE.

